If the engine oil life is less than 15%, you will see the Maintenance Minder messages appear on the information display or the multi-information display every time you turn the ignition switch to ON (II)*1. The messages notify you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.

Models with information display

## To Use Maintenance Minder™

### Displaying the Engine Oil Life

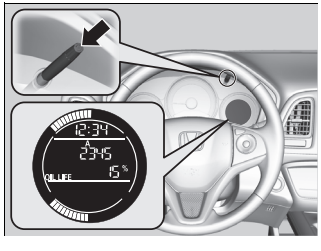


**1.** Turn the ignition switch to ON (II).
**2.** Press the (select/reset) knob repeatedly until the engine oil life appears on the information display.

The Maintenance Minder indicator ( ) stays on in the instrument panel after the engine oil life becomes **0%**. Have the indicated maintenance done by a dealer immediately.

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Displaying the Engine Oil Life

Based on the engine operating conditions, the remaining engine oil life is calculated and displayed as a percentage.

| Displayed Engine Oil Life (%) | Calculated Engine Oil Life (%) |
|---|---|
| 100 | 100 to 91 |
| 90 | 90 to 81 |
| 80 | 80 to 71 |
| 70 | 70 to 61 |
| 60 | 60 to 51 |
| 50 | 50 to 41 |
| 40 | 40 to 31 |
| 30 | 30 to 21 |
| 20 | 20 to 16 |
| 15 | 15 to 11 |
| 10 | 10 to 6 |
| 5 | 5 to 1 |
| 0 | 0 |

## Maintenance Service Items

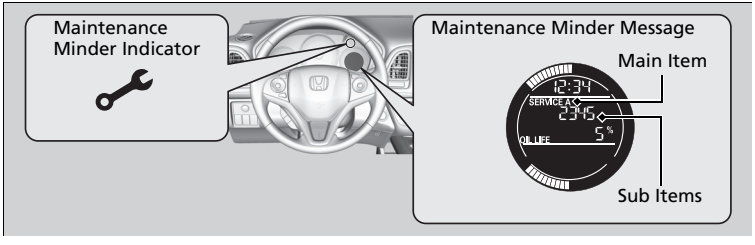


Maintenance Service Items

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

| CODE | Maintenance Main Items |
|---|---|
| A | • Replace engine oil*1 |
| B | • Replace engine oil*1 and oil filter<br>• Inspect front and rear brakes<br>• Inspect tie rod ends, steering gearbox, and boots<br>• Inspect suspension components<br>• Inspect driveshaft boots<br>• Inspect brake hoses and lines (Including ABS/VSA®)<br>• Inspect all fluid levels and condition of fluids<br>• Inspect exhaust system#<br>• Inspect fuel lines and connections# |

*1: If a message **SERVICE** does not appear more than 12 months after the display is reset, change the engine oil every year.
#: See information on maintenance and emissions warranty.

| CODE | Maintenance Sub Items |
|---|---|
| 1 | • Rotate tires |
| 2 | • Replace air cleaner element*2<br>• Replace dust and pollen filter*3<br>• Inspect drive belt |
| 3 | • Replace transmission fluid*4 |
| 4 | • Replace spark plugs<br>• Inspect valve clearance |
| 5 | • Replace engine coolant |
| 6 | • Replace rear differential fluid* |

*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).
*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).
*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 25,000 miles (40,000 km).

* Not available on all models

## ■ Resetting the Display

Reset the engine oil life display if you have performed the maintenance service.

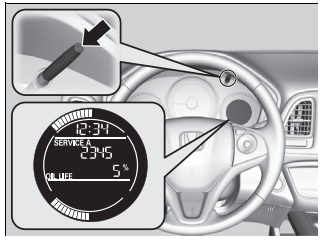


1. Turn the ignition switch to ON II.
2. Display the engine oil life by repeatedly pressing the (select/reset) knob.
3. Press and hold the knob for 10 seconds or more.
   ▶ The engine oil life indicator and the maintenance item codes blink.
4. Press the knob for five seconds or more.
   ▶ The displayed maintenance items disappear, and the engine oil life display returns to **100%**.

Resetting the Display

NOTICE

Failure to reset the engine oil life after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

The dealer will reset the engine oil life display after completing the required maintenance service. If someone other than a dealer performs maintenance service, reset the engine oil life display yourself.

Models with multi-information display

# To Use Maintenance Minder™

## ■ Displaying the Maintenance Minder Information

Maintenance items, which should be serviced at the same time that you replace the engine oil, appear on the multi-information display.
You can view them on the engine oil life screen at any time.

**1.** Turn the ignition switch to ON (II)*1.

**2.** Press the ▲ⓘ/▼ (Information) button repeatedly until the engine oil life appears on the multi-information display.

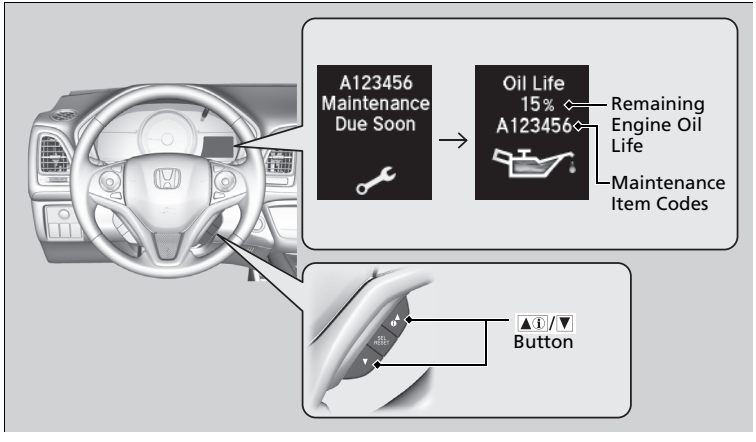


*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

### Displaying the Maintenance Minder Information

Based on the engine operating conditions, the remaining engine oil life is calculated and displayed as a percentage.

| Displayed Engine Oil Life (%) | Calculated Engine Oil Life (%) |
|---|---|
| **100** | 100 to 91 |
| **90** | 90 to 81 |
| **80** | 80 to 71 |
| **70** | 70 to 61 |
| **60** | 60 to 51 |
| **50** | 50 to 41 |
| **40** | 40 to 31 |
| **30** | 30 to 21 |
| **20** | 20 to 16 |
| **15** | 15 to 11 |
| **10** | 10 to 6 |
| **5** | 5 to 1 |
| **0** | 0 |

There is a list of maintenance main and sub items you can view on the multi-information display.

## Maintenance Service Items

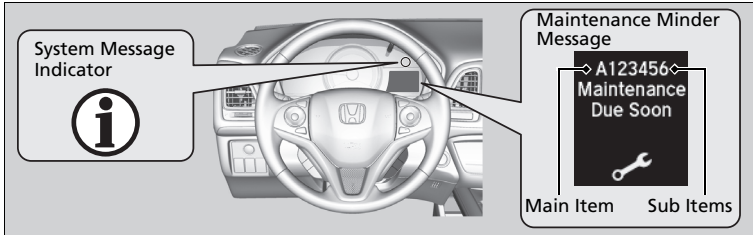


Maintenance Service Items

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

| CODE | Maintenance Main Items |
|---|---|
| A | • Replace engine oil*1 |
| B | • Replace engine oil*1 and oil filter<br>• Inspect front and rear brakes<br>• Inspect tie rod ends, steering gearbox, and boots<br>• Inspect suspension components<br>• Inspect driveshaft boots<br>• Inspect brake hoses and lines (Including ABS/VSA®)<br>• Inspect all fluid levels and condition of fluids<br>• Inspect exhaust system#<br>• Inspect fuel lines and connections# |

*1: If a message **SERVICE** does not appear more than 12 months after the display is reset, change the engine oil every year.
#: See information on maintenance and emissions warranty.

| CODE | Maintenance Sub Items |
|---|---|
| 1 | • Rotate tires |
| 2 | • Replace air cleaner element*2<br>• Replace dust and pollen filter*3<br>• Inspect drive belt |
| 3 | • Replace transmission fluid*4 |
| 4 | • Replace spark plugs<br>• Inspect valve clearance |
| 5 | • Replace engine coolant |
| 6 | • Replace rear differential fluid* |

*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).
*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).
*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 25,000 miles (40,000 km).



* Not available on all models

## ■ Resetting the Display

Reset the maintenance minder information display if you have performed the maintenance service.

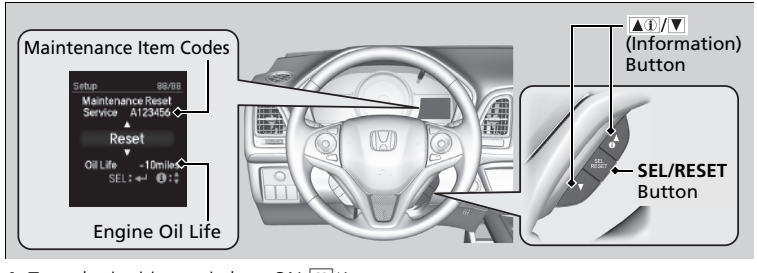


**1.** Turn the ignition switch to ON (II)*1.

**2.** Press the ▲/▼ button to select **Maintenance Info.**, then press the **SEL/RESET** button.

**3.** Select **Reset** with the ▲/▼ button, then press the **SEL/RESET** button.
▶ The displayed maintenance items disappear, and the engine oil life display returns to **100%**.

To cancel the oil life reset mode, select **Cancel**, then press the **SEL/RESET** button.

*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

Resetting the Display

NOTICE

Failure to reset the Maintenance Minder™ display after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

The dealer will reset the Maintenance Minder™ display after completing the required maintenance service. If someone other than a dealer performs maintenance service, reset the Maintenance Minder™ display yourself.