Honda Sensing®

A driver support system which employs the use of two distinctly different kinds of sensors: a radar sensor located in the lower part of the front bumper and a front sensor camera mounted to the interior side of the windshield, behind the rearview mirror.

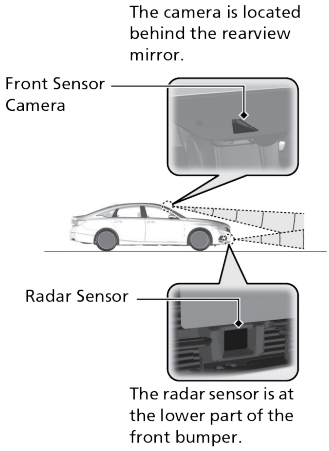

- Do not change the position of the radar sensor or any of the surrounding parts.
- Do not apply paint, stickers, or attach non-genuine accessories to the front part of the radar sensor or the surrounding area.
- Be particularly careful that any custom license plate frame or other accessory does not block any part of the radar beam path.

These are the components of Honda Sensing®:

Adaptive Cruise Control (ACC) with Low Speed Follow[*1]: Helps maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

Adaptive Cruise Control (ACC)[*1]: Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours, without you having to keep your foot on the brake or the accelerator.

Lane Keeping Assist System (LKAS): Provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane.

Road Departure Mitigation (RDM) System: Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

Collision Mitigation Braking System™ (CMBS™): Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours. The CMBS™ is designed to alert you when a potential collision is

**1 - If equipped*

determined, as well as to reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

Traffic Sign Recognition System: Reminds you of road sign information, such as the current speed limit, your vehicle has just passed through, showing it on the driver information interface .

- **"Some Driver Assist Systems Cannot Operate:" Information Messages**

  Honda Sensing® is deactivated and a message appears when:

  Radar Obstructed and Clean Front Windshield

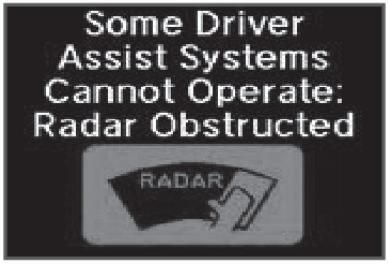

  Anything covers the radar sensor cover or the area around the front sensor camera preventing detection of a vehicle in front. May appear when driving in bad weather (rain, snow, fog, etc.).

  - Stop your vehicle in a safe place and clear the area using a soft cloth.
  - Have your vehicle checked by a dealer if the message does not disappear even after you clean the area.

  Camera Temperature Too High

  The temperature inside the front sensor camera is too high.

  - Use the climate control system to cool the interior. Defroster mode will direct airflow toward the camera.