Heating and Cooling System*1

Manually control the heating and cooling in your vehicle's interior using the buttons on the dashboard.

Front Operation

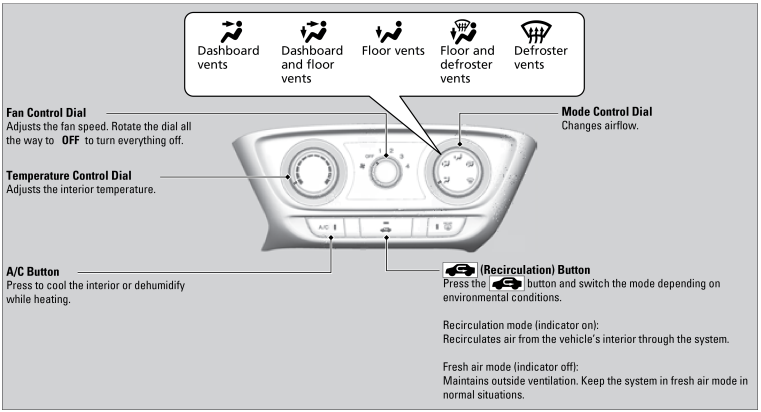

Climate Control System*1

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

Front Operation - Climate Control System

**1 - If equipped*

Models Without SYNC icon

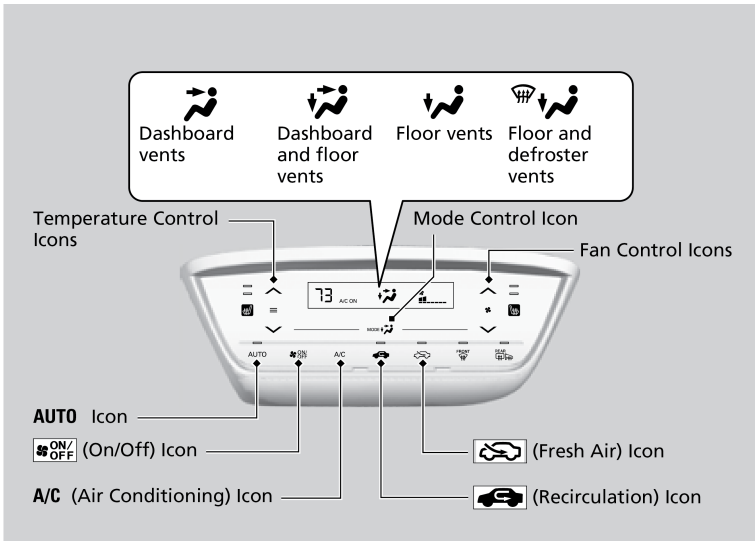

Models with SYNC icon

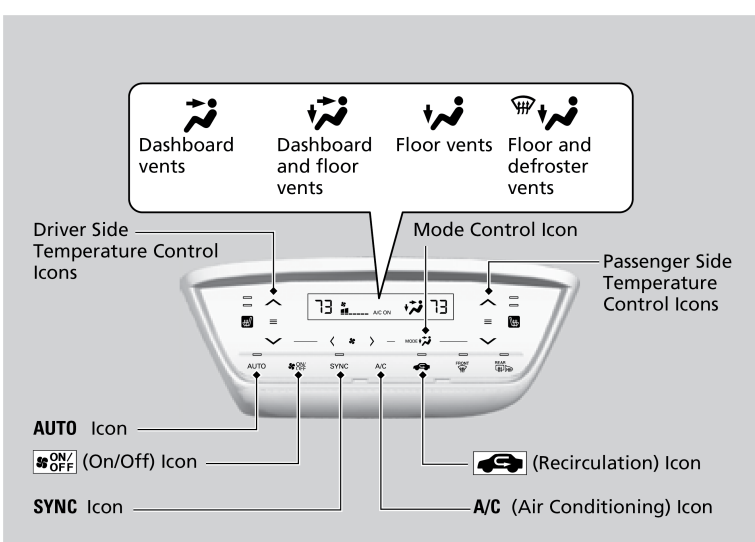

Heated Windshield Button*3

Press the heated windshield button to deice the windshield at the wiper park area and along the driver side edge of the windshield when the power mode is in ON. The heated windshield will automatically switch off after 15 minutes.

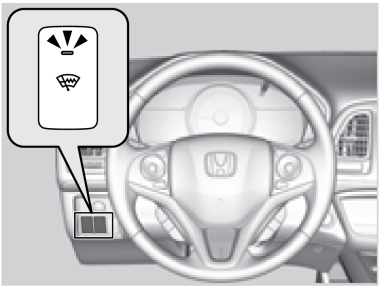

Front Seat Heaters*1

The ignition switch*1 / **ENGINE START/STOP** button*1 must be in ON to use the seat heaters.

- Once - The HI setting (two indicators on)
- Twice - The LO setting
- Three times - The OFF setting (no indicator on)

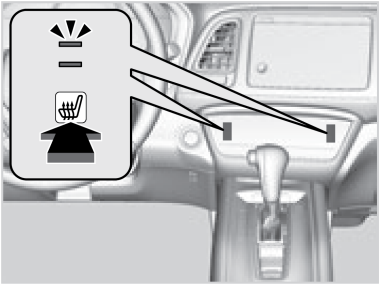

Do not use the seat heaters even in LO when the engine is off. Under such conditions, the battery may be weakened, making the engine difficult to start.

In the LO setting, the heater runs continuously and does not automatically turn off.

⚠ WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use seat heaters.

3 - Canadian models only
1 - If equipped