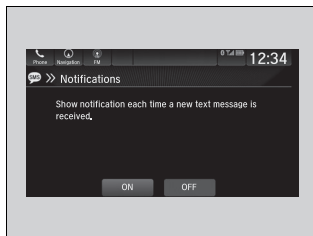## ■ To Set Up Text Message Options

■ To turn on or off the text message notice

1. Select [HOME].
2. Select **Messages**.
3. Select **Settings**.
4. Select **Notifications**.
5. Select **ON** or **OFF**.

≫To Set Up Text Message Options

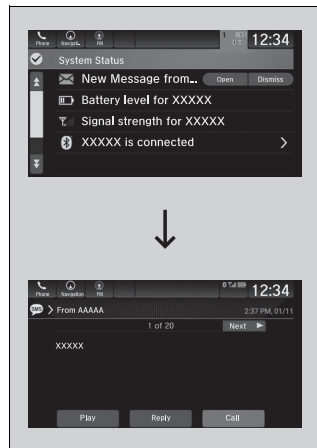To use the text message function, it may be necessary to set up on your phone.

≫To turn on or off the text message notice

ON: A pop-up notification comes on every time you receive a new message.
OFF: The message you receive is stored in the system without notification.

Features

■ Receiving a Text Message

HFL can display newly received text messages as well as the last 20 messages received on a linked cell phone. Each received message can be read aloud and replied to using a fixed common phrase.

1. A pop-up appears and notifies you of a new text message.
2. Select **Open** to display the message.
   ► The text message is displayed.
3. Select **Play** to listen to the message. To discontinue the message read-out, select **Stop**.

≫ Receiving a Text Message

The system does not display any received messages while you are driving. You can only hear them read aloud.
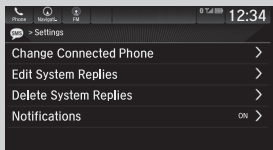
The system can only receive messages that are sent a text (SMS) messages. The message sent using the data services will not be displayed in the list.

With some phones, you may be able to display up to 20 of the last text messages received.

State or local laws may limit your use of the HFL text message feature. Only use the text message feature when conditions allow you to do so safely.

Features

■ Selecting a Phone

You can select one from the *Bluetooth*® device list to be active and receive notifications.
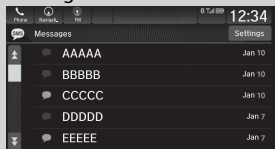
1. Select 🏠.
2. Select **Messages**.
3. Select **Settings**.
4. Select **Change Connected Phone**.
5. Change a desired phone.
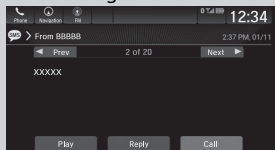   ▷ **To change the currently paired phone**
   P. 442

Features

■ **Displaying Messages**
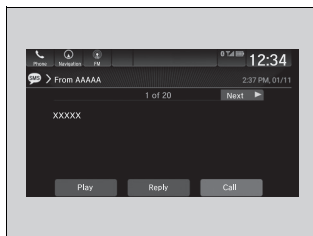
Message List

↓

Text Message

1. Select [HOME].
2. Select **Messages**.
   ▶ Select a phone if necessary.
3. Select a message.
   ▶ The text message is displayed.

≫Displaying Messages

The ▢ (blue) icon appears next to an unread message.

If you delete a message on the phone, the message will also be deleted from the system. If you send a message from the system, the message goes to your phone's outbox.

To see the previous or next message, select ◀ **Prev** or **Next** ▶ on the message screen.

■ **Read or Stop reading a message**

1. Go to the text message screen.
2. Select **Play**.
   ▶ The system starts reading the message aloud.
3. Select **Pause** to stop reading.
   Select **Play** again to start reading the message.

■ **Reply to a message**

1. Go to the text message screen.
2. Select **Reply**.
3. Select the reply message.
   ▶ The pop-up menu appears on the screen.
4. Select **Send** to send the message.
   ▶ **Message sent** appears on the screen when the reply message was successfully sent.

>> Reply to a message

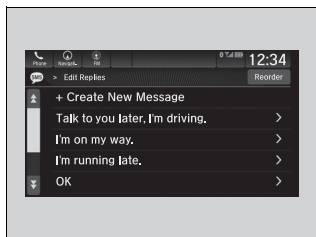The available fixed reply messages are as follows:
• **Talk to you later, I'm driving.**
• **I'm on my way.**
• **I'm running late.**
• **OK**
• **Yes**
• **No**

You can add a reply message by selecting **+ Create New Message**.
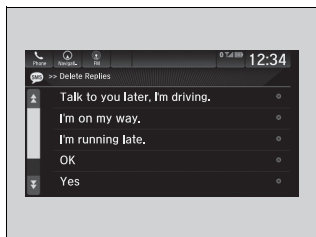   ≥ **To edit a reply message** P. 456

Only certain phones receive and send messages when paired and connected. For a list of compatible phones:
• U.S.: Visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.
• Canada: For more information on smartphone compatibility, call 1-888-528-7876.

Features

■ To edit a reply message

1. Select ⌂.
2. Select **Messages**.
3. Select **Settings**.
4. Select **Edit System Replies**.
5. Select the reply message you want to edit or **+ Create New Message**.
   ▶ The on-screen keyboard screen is displayed.
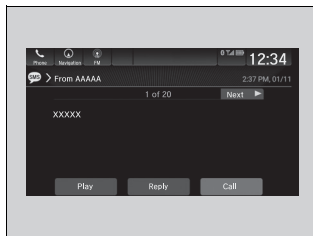**6.** Enter a reply message, and then select **Save**.

■ To delete a reply message

1. Select ⌂.
2. Select **Messages**.
3. Select **Settings**.
4. Select **Delete System Replies**.
5. Select ⊗ on the reply message you want to delete.
   ▶ The pop-up menu appears on the screen.
6. Select **Delete**.

≫To edit a reply message

You can change the order of reply messages by selecting **Reorder**.

■ **Making a call to a sender**

1. Go to the text message screen.

2. Select **Call**.

Features