MULTI-INFORMATION DISPLAY (MID) (models with navigation)

Displays various information and messages to help you maintain your vehicle.

Accessing the Multi-Information Display

When you start the engine, the MID shows your last active selection from the previous drive cycle.

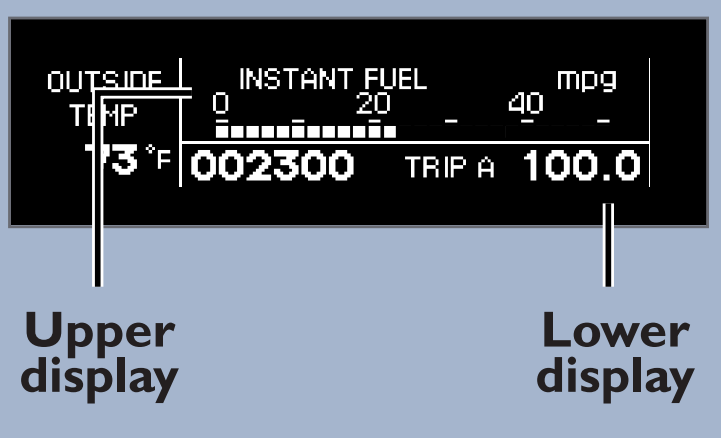

To toggle between the different displays:

- **Press** either Info button for the upper display.
- **Press** SEL/RESET to view lower displays.

MID Lower Displays

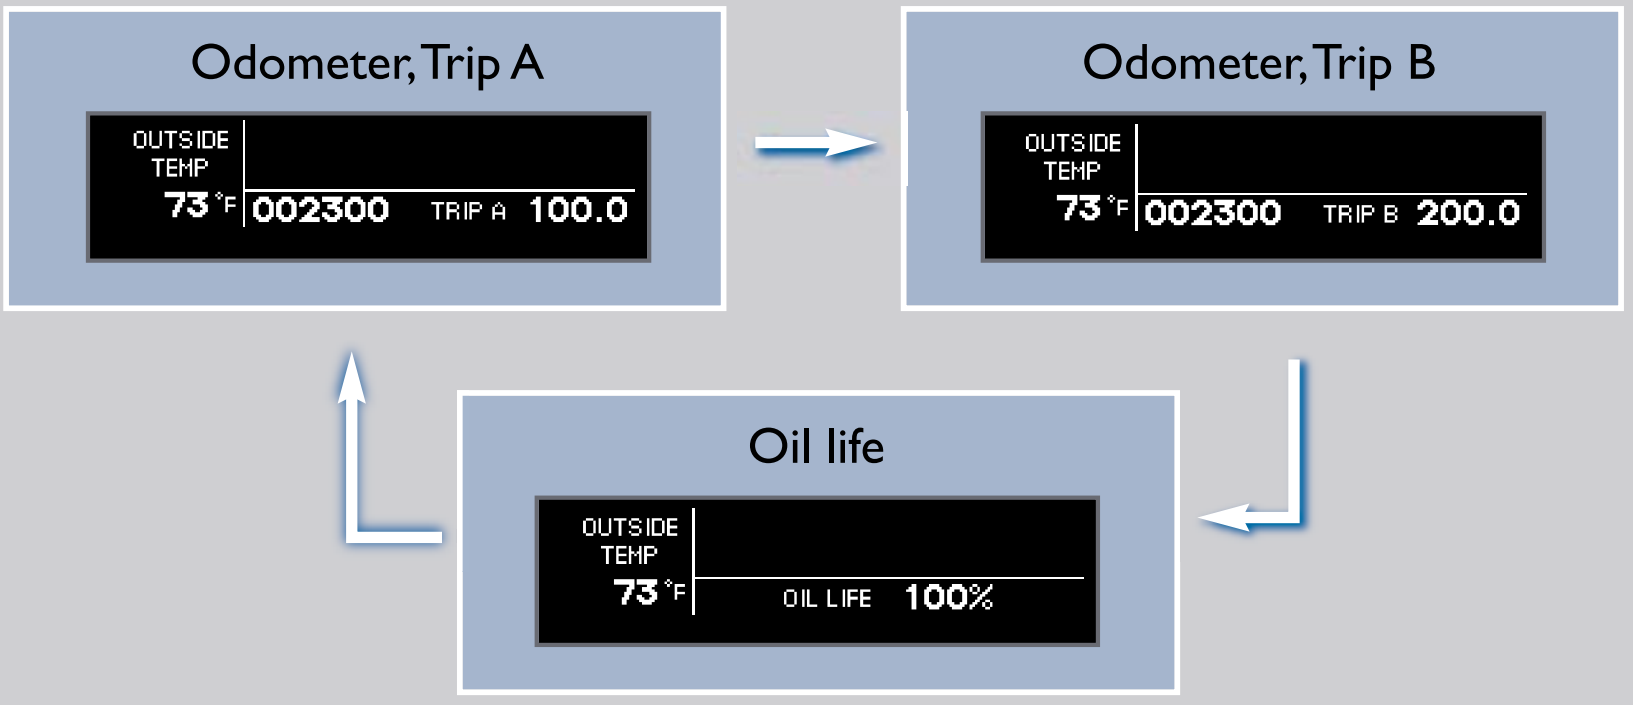

MID Upper Displays

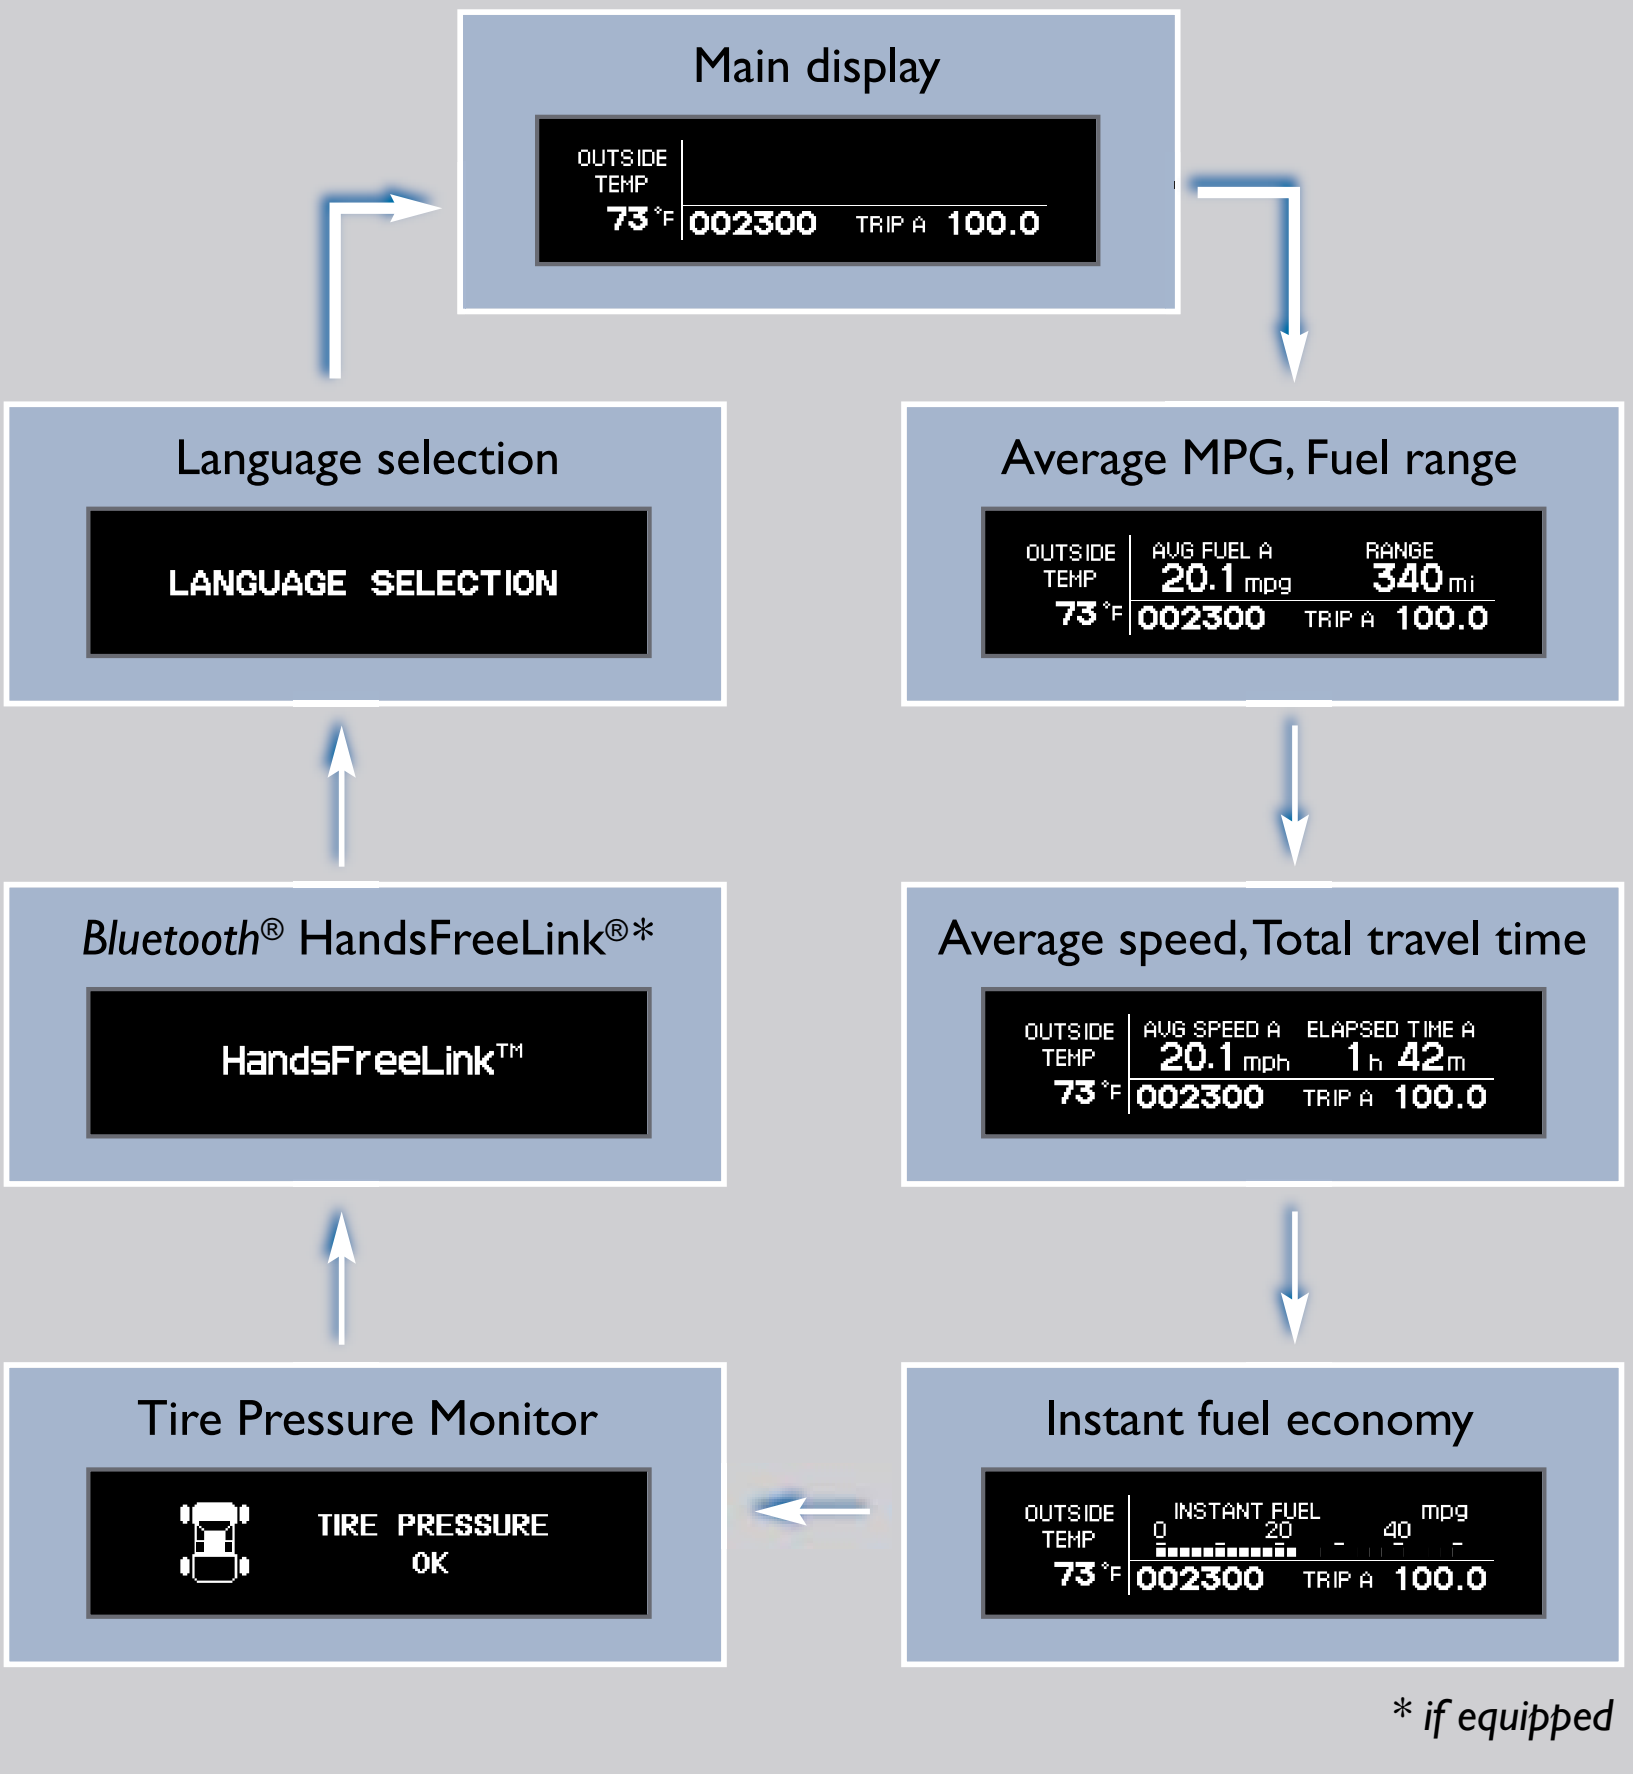

** if equipped*