MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

Accessing the Multi-Information Display

When you start the engine, the MID shows the main display.

To toggle between the MID displays:

- Press either Info button (▲/▼) for the main displays.
- Press SEL/RESET for the sub-displays.

MID Main Displays

MID Main Display

Bluetooth®HandsFreeLink®*

Ecological Drive Display

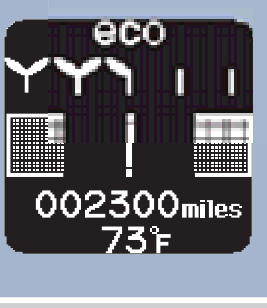

IMA System Power Flow Monitor

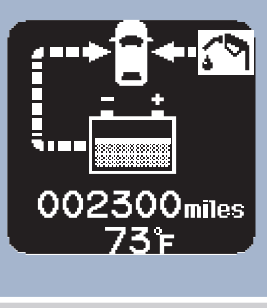

Average Fuel Economy Records

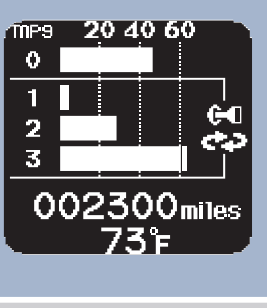

Average Speed

Instant and Average Fuel Economy A/B

Elapsed Time

Range

**if a phone is paired and active*