FORWARD COLLISION WARNING (FCW)

Alerts you to the possibility of a front-end collision.

How It Works

At 10 mph or higher, if the camera mounted in the center of the upper windshield detects a vehicle in front of you and the system determines a collision is likely, the system warns you with the following visual and audible alerts:

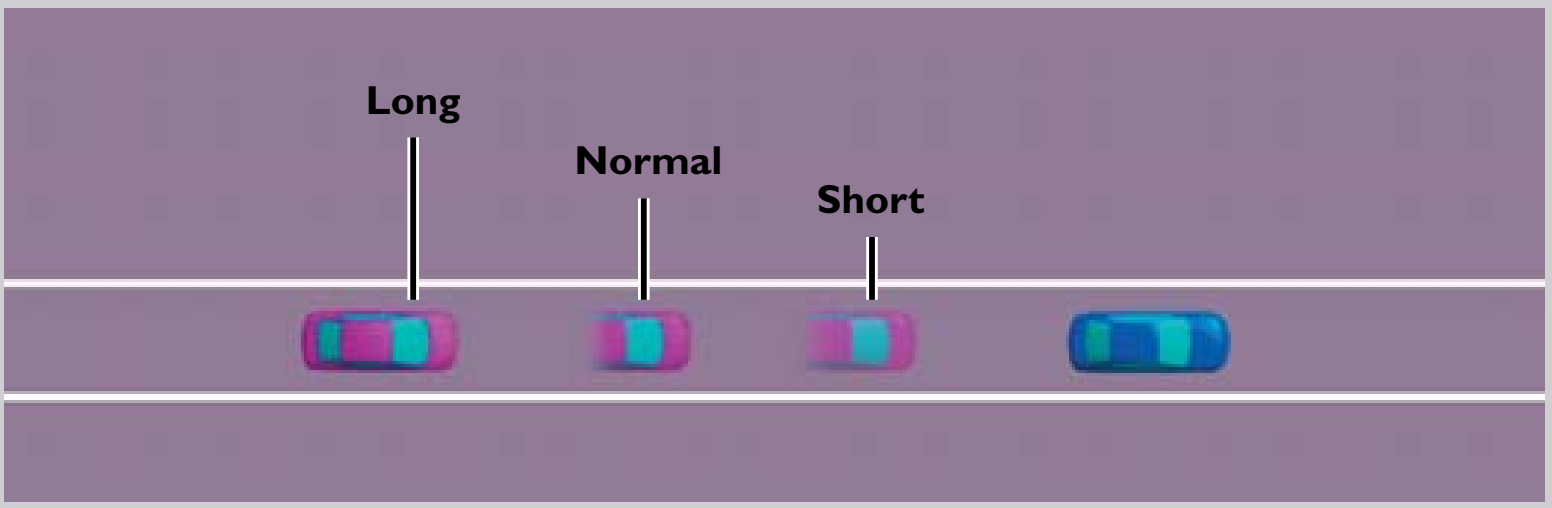

If you do not brake in time or take preventive action, a message appears in the MID and a beep sounds.

FCW may not activate under certain conditions. See your Owner's Manual for more information.

Changing Settings

Determine the warning timing, or turn the system off.

1. Press SETTINGS. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select Driver Assist System Setup.
4. Select Forward Collision Warning Distance.
5. Select Long, Normal, Short, or Off.
6. Press BACK to exit the menu.