AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.
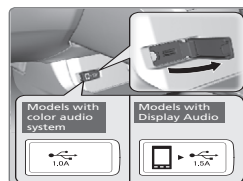
Basic Audio Operation

Connect audio devices and operate the audio system.

■ USB Port

Connect a USB flash drive or other audio device, such as an iPod or iPhone®. Install the flash drive or cable connector to the USB port.
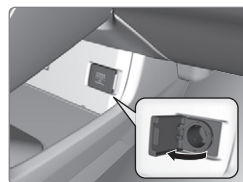
Models with color audio system

The USB port (1.0A) is located in the front console and is for playing audio and charging devices.

■ Accessory Power Socket

Open the socket cover in the front console to use power when the vehicle is on.

> **NOTICE**
>
> Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

■ Cable Management

Connect a cable to a port or socket in the lower front-console tray, then route the cable to the upper front-console tray via the cable guides molded into the rear of the upper tray.

*iPod and iPhone are registered trademarks of Apple, Inc. *if equipped"*
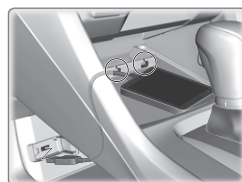
■ Steering Wheel Controls

You can operate certain functions of the audio system using the steering wheel controls.

Models with color audio

SOURCE button: Cycle through available audio modes.

+ / - buttons: Adjust audio volume.

◀ / ▶ buttons: Change presets, tracks, albums, or folders.

FM/AM Radio

Press ◀ or ▶ for the next or previous preset station.
Press and hold ◀ or ▶ to seek the next or previous strong station.

iPod/USB/*Bluetooth* Audio

Press ◀ or ▶ for the next or previous track.
Press and hold ◀ or ▶ for the next or previous folder (USB).
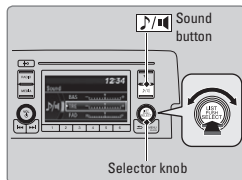
*if equipped

Adjusting the Sound

Adjust various sound settings.

Models with color audio system

Use the selector knob to make and enter selections.

1. Press the Sound button. Use the selector knob to scroll through sound mode choices.

2. Select a sound mode to change and adjust it using the selector knob.

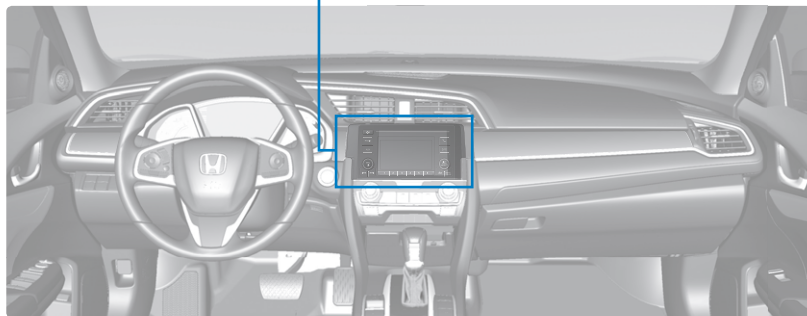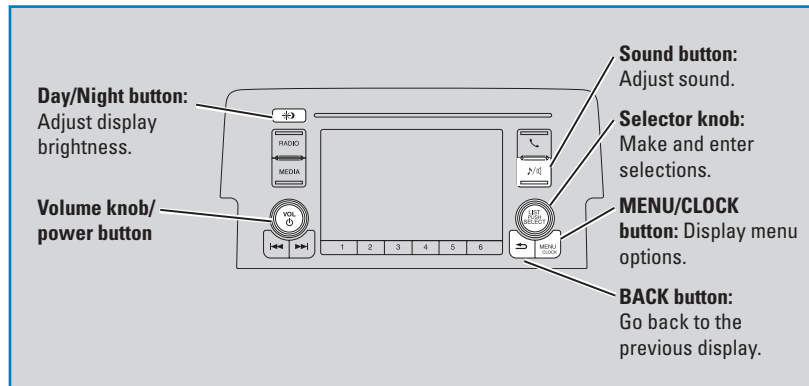3. Press the Back button to exit the menu.

Your vehicle comes equipped with software, which is governed by the End User License Agreement in this vehicle's Owner's Manual, and which contains a binding arbitration clause. Please refer to the End User License Agreement for the terms and conditions governing your use of the installed software, as well as the applications, services, functions, and content provided through the software. Your use of the installed software will serve as your consent to the terms and conditions of the End User License Agreement.

You may opt out of the arbitration provisions within 30 days of your initial use of the Software by sending a signed, written notice to HONDA at American Honda Motor Co., Inc. Honda Automobile Customer Services Mail Stop 100-5E-8A, 1919 Torrance Blvd. Torrance, CA 90501-2746
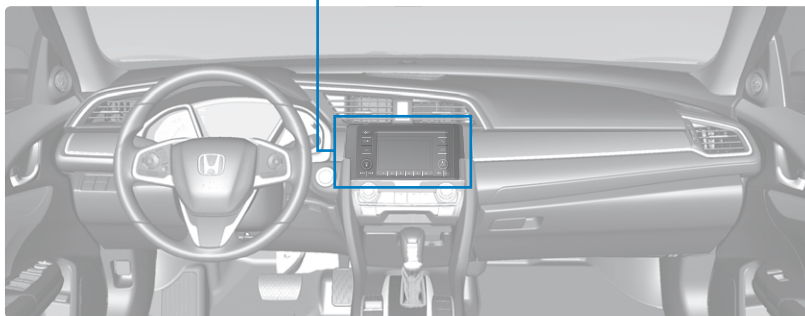
Color Audio System

Use the buttons to control the display and audio system.

Day/Night button:
Adjust display
brightness.

**Volume knob/
power button**

Sound button:
Adjust sound.

Selector knob:
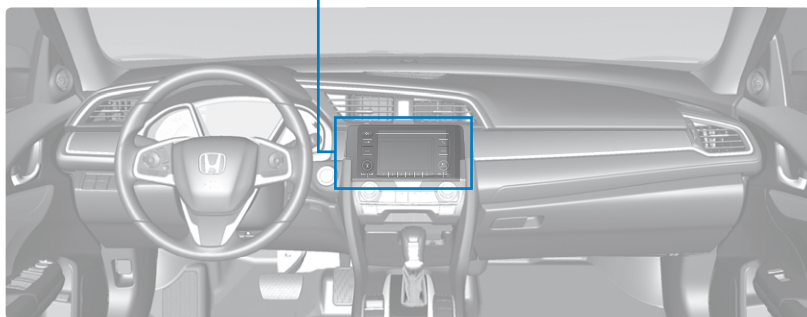Make and enter
selections.

**MENU/CLOCK
button:** Display menu
options.

BACK button:
Go back to the
previous display.

FM/AM Radio Models with color audio system

Play FM or AM radio stations.

RADIO button:
Select a band.

Seek/Skip buttons:
Search up and
down the selected
band for a station
with a strong signal.

Selector knob:
Rotate to tune
radio frequency.
Press for more
options.

12:34

103.5 MHz

Preset buttons (1–6): Press and hold a preset
button to store the current station. Press a
preset button to select a previously stored
station.
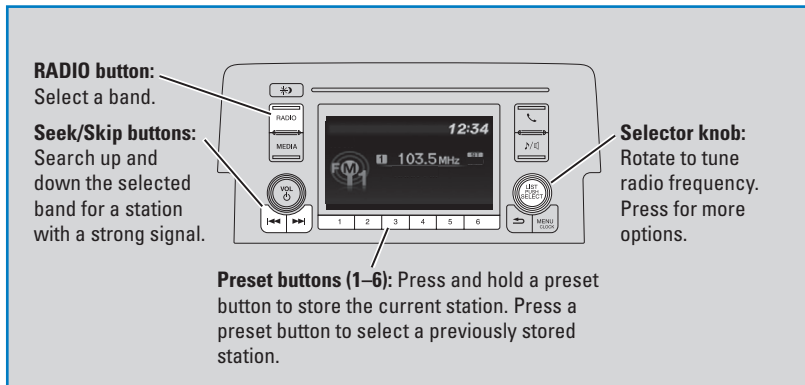
iPod® Models with color audio system

Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port.

MEDIA button: Play a connected iPod.

Seek/Skip buttons: Press to change tracks. Press and hold to move rapidly within a track.

Selector knob: Rotate to change tracks. Press to enter the music search list.

Play **Pause** **Repeat one track** **Shuffle all tracks** **Shuffle album**
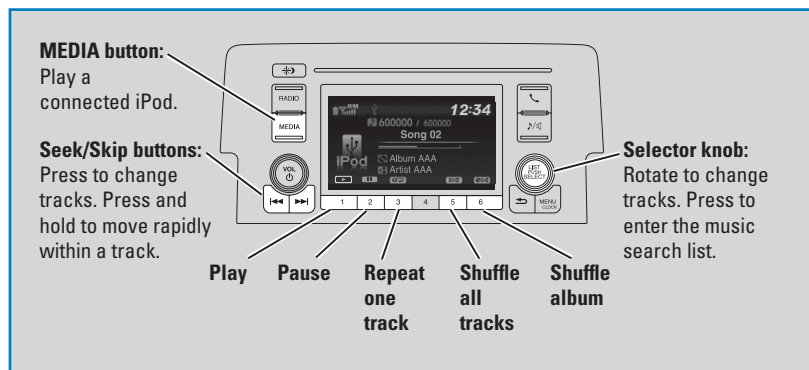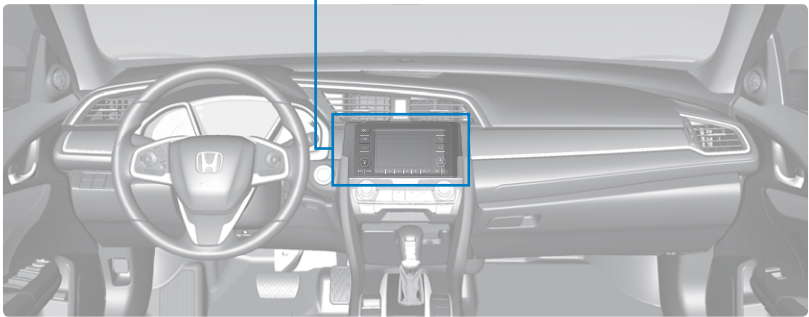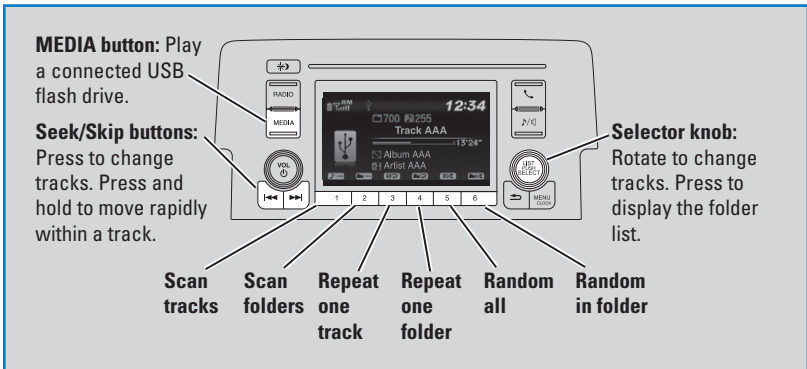
■ Searching for Music

Use the selector knob to search for tracks stored on the iPod.

1. From the audio screen, press the selector knob.

2. Select a search option.

3. Select the track you want to play.

iPod is a trademark of Apple, Inc
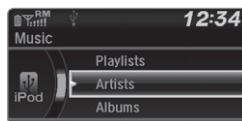
USB Flash Drive   Models with color audio system

Play and operate a USB flash drive through the vehicle's audio system. Connect your device.

MEDIA button: Play a connected USB flash drive.

Seek/Skip buttons: Press to change tracks. Press and hold to move rapidly within a track.

Selector knob: Rotate to change tracks. Press to display the folder list.

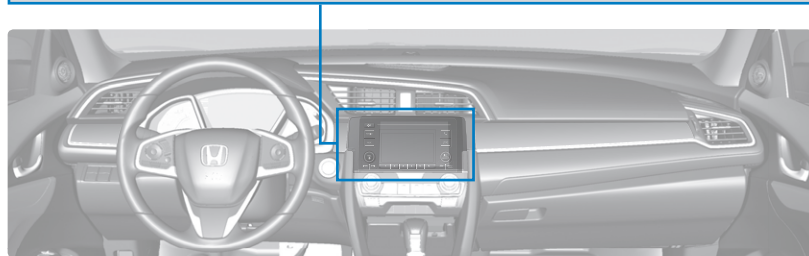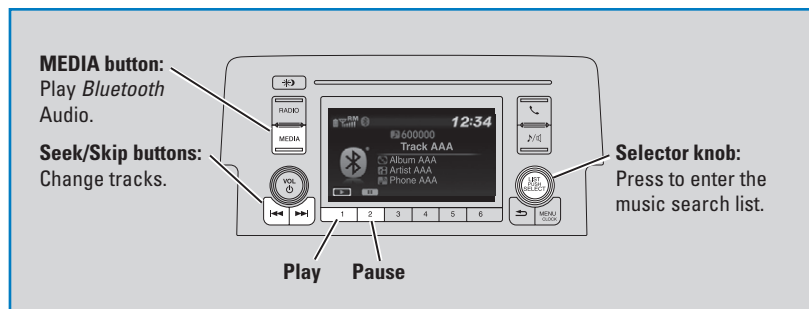| Scan tracks | Scan folders | Repeat one track | Repeat one folder | Random all | Random in folder |

■ Searching for Music

Use the selector knob to search for tracks stored on the flash drive.

1. From the audio screen, press the selector knob.

2. Select a folder.

3. Select the track you want to play.

## *Bluetooth*® **Audio** Models with color audio system

Play streaming or stored audio from your compatible phone through the vehicle's audio system. Visit *automobiles.honda.com/handsfreelink* (U.S.) or phone (888) 528-7876 (U.S. and Canada) to check phone compatibility. Standard data rates apply with your phone service provider. Connect your phone to *Bluetooth* HandsFreeLink.

MEDIA button:
Play *Bluetooth*
Audio.

Seek/Skip buttons:
Change tracks.

Selector knob:
Press to enter the
music search list.

Play   **Pause**

■ Searching for Music

Use the selector knob to search for tracks stored on the device.

1. From the audio screen, press the selector knob.

2. Select a category.

3. Select the track you want to play.
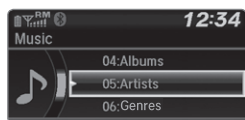
Notes:
- Make sure the volume on your phone is properly adjusted.
- Some functions may not be available on some devices.
- The resume/pause function and remote audio controls are not supported on all phones.

*Applicable laws may prohibit the operation of
handheld electronic devices while operating a vehicle.
Launch streaming audio on your phone only when it is safe to do so.*

BLUETOOTH® **HANDSFREELINK**® **(HFL)**

Learn how to operate the vehicle's hands-free calling system.

Basic HFL Operation Models with color audio system

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit *automobiles.honda.com/handsfreelink* (U.S.) or phone (888) 528-7876 (U.S. and Canada) to check phone compatibility.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.
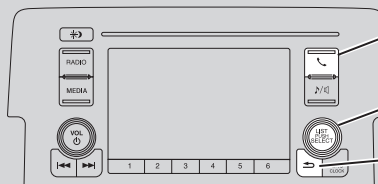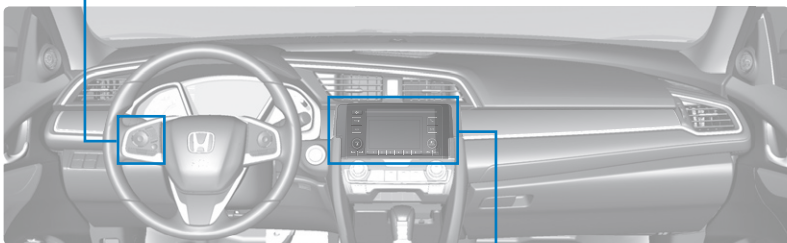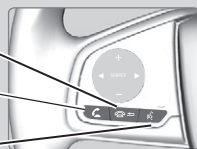
■ HFL Controls

Use the controls to enter information and make selections.

Hang-Up/Back button: End or decline a call or cancel an operation.

Pick-Up button: Go to the phone screen or answer an incoming call.

Talk button: Make a call using a stored voice tag.

PHONE button: Display the phone screen.

**Selector knob:** Rotate and press to make selections.

Back button: Go back to the previous display.

Pairing a Phone Models with color audio system

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can be done only when the vehicle is stopped. Use the selector knob to make and enter selections.

■ Pairing the First Phone

1. Press the Phone or Pick-up button to go to the Phone screen. A prompt appears. Select Yes.

2. Make sure your phone is in discovery mode. Select OK.

3. The system searches for your phone. Select your phone when it appears on the list.
   If your phone does not appear:
   Select Phone Not Found? and search for HandsFreeLink from your phone. Connect to HFL.

4. The system gives you a pairing code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
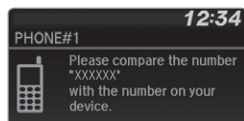
■ Pairing an Additional Phone

1. Press the Phone or Pick-up button to go to the Phone screen. If a prompt appears asking to connect to a phone, select No.

2. Select Phone Setup.

3. Select Bluetooth Setup.

4. Select Add New Device.

5. Make sure your phone is in discovery mode. Select OK.

6. The system searches for your phone. Select it when it appears on the list.
   If your phone does not appear:
   Select Phone Not Found? and search for HandsFreeLink from your phone. Connect to HFL.

7. The system gives you a pairing code. Enter it on your phone when prompted.
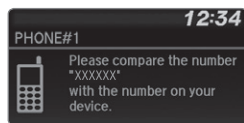
Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.

Making a Call Models with color audio system

You can make a call using several methods.

■ Dialing a Number

Enter a 10-digit phone number to call. Use the selector knob to make and enter selections. This method is inoperable while the vehicle is moving.

1. Press the Phone button.
2. Select Dial.
3. Enter the phone number. Select the green phone icon to call.

■ Using the Phonebook

When your phone is paired, its phonebook is automatically imported to the system. Use the selector knob to make and enter selections. This method is inoperable while the vehicle is moving.

1. Press the Phone button.
2. Select Phonebook.
3. Scroll through the alphabetical list to find the name and number you want to call, and select it to call.

■ Storing Speed Dial Entries

Store up to 20 numbers for quick dialing. Use the selector knob to make and enter selections.

1. Press the Phone button.
2. Select Speed dial.
3. Select Add New.
4. Select an entry method.
5. If desired, you can create a voice tag for the number. Follow the prompts.

■ Using Speed Dial

Make calls quickly using stored speed dial entries. Use the selector knob to make and enter selections.

1. Press the Phone button.
2. Select Speed Dial.
3. Scroll through the list to find the entry you want to call, and select it to call.

Speed dial entries with stored voice tags can be called using the Talk button. Press the Talk button and follow the prompts.