Driving Position Memory System*1

You can store two driver's seat (except for power lumbar), positions with the driving position memory system.

When you unlock and open the driver's door with a remote transmitter, the seat adjusts to retracted positions of one of the two preset positions automatically.

Storing a Position in Memory

1. Adjust the seat, to your preferred positions.
2. Press SET.
3. Press and hold memory button 1 or 2 within 5 seconds of pressing the SET button.

   You will her two beeps when the memory is set.
4. Press one of the memory buttons to recall previously stored positions.

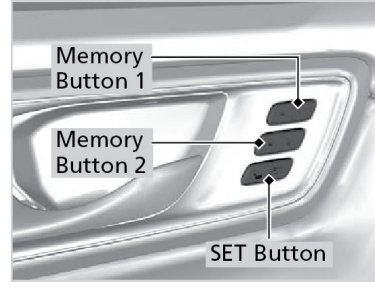

*1 - If equipped